

# MD-1

1. **Press Enter:** This will take you to screen **1234**, which is the password screen. Press **Enter** again, and you'll see **P-0000**. This is where you can change the password. Press **Enter** once more to access the settings.
2. **Tone Duration:** The next screen will display **D-01** (D-01 = 1 second, D-02 = 2 seconds, D-03 = 3 seconds), which controls the duration of the tone when someone walks through. Use the **up and down arrows** to select the desired duration, then press **Enter** to confirm.
3. **Sensitivity:** After pressing **Enter**, the screen will show **1-85**, indicating the unit's sensitivity (1 being the lowest and 99 the highest). Adjust the sensitivity using the **up and down arrows**. Press **Enter** to save.
4. **Frequency:** Press **Enter** again to reach the last setting, which will display **F-7800**. This is the machine's frequency setting and should only be adjusted when multiple units are placed next to each other. Press **Enter** once more to return to the main screen.

This step-by-step guide simplifies the process and helps users navigate the system settings efficiently.