

MD-6-ADA QUICK GUIDE

Press enter the First 0 will flash put in 8 hit right arrow to change all 0 to a 8 then press enter again. If password is correct, you will get screen as following

H--0 this is overall setting to change hit enter number will flash use up and down arrow to change, Enter will keep the setting

Hit the down arrow will take you to screen

A--4

Hit the down arrow will take you to screen

P--- 1234 this will change your password

Hit the down arrow will take you to screen

A--3 this will change the tone of the machine hit enter number will flash hit up and down to change tones of machine hit enter to save

Hit the down arrow will take you to screen

A--2 this is the alarm duration how long unit will beep when alarm is set off hit enter to change number will flash change as desired hit enter to save

Hit down arrow will take you to screen

A--1 this controls the volume to change hit enter number will flash change to desired volume hit enter to save

Hit the down arrow will take you to screen

F--1 this will change the frequency of the machine only need to change if you have multiple units hooked up near each other

Hit the down arrow will take you to screen

H--6 this is the top zone of the unit higher the number higher the sensitivity to change hit enter number will flash hit enter to save

Hit down arrow again and will take you to screen

H--5 to H--1 to change are the all the zones will go as H--6

To get out of settings hold Enter red light will appear hold enter once again unit will reset.