

## XLD-H

Press enter will ask for password press enter once more and will get into setting as follows:

1: Alarm Set: this will get into settings for the alarm tone, sound and led alarm time settings for the machine which follow: use left and right arrow to navigate

Sound alarm time= how long the machine will alarm when detected metal

Sound alarm volume= how loud the tone is

Sound alarm tone= different types of tones machine will make

Led alarm time = how long lights on the leg will stay on during passing

2: Sensitive=press enter and will have following settings:

Shock level=

Base value=

Zone value set press enter this will get you into the zone settings

1: zone val

2: zone val

3: zone val

4: zone val

5: zone val

6: zone val n/a

3: Frequency= press enter and will have the following settings:

Enter frequency= change when you have two together

Self-calibration: Open or Closed

4: IR SET= This will need be changed when you have the pair together (one will have to be on up and the other will have to be down)

1: Down IR    2: UP IR

5: Occasion= These are pre-set functions of the machine options are:

1: airport      4: exhibition

2:casino      5:school

3: games      6: factory

6: System= these settings go as follow:

1: Time Set

2: Display

3: System

4: Password

Once through all the settings hit the back arrow to get back to the main screen.